


Professional banking equipment

DORS

NEW PRODUCTS
NEW TECHNOLOGIES
NEW LEVEL OF PROTECTION

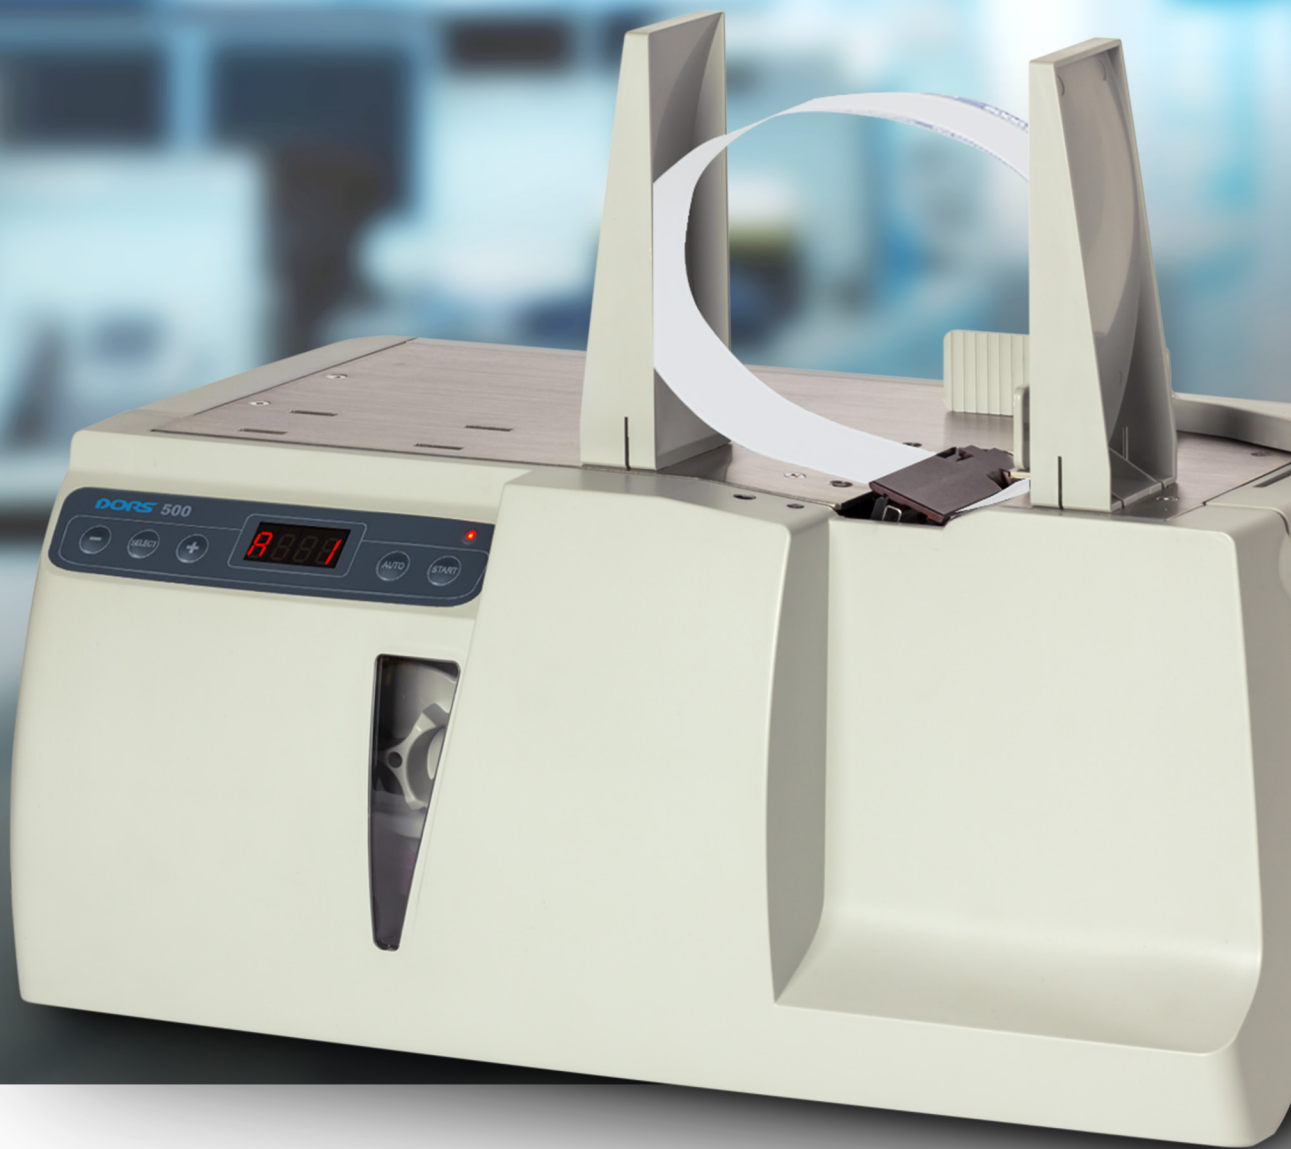

DORS 500

BANDING MACHINE

NEW: Compatible with paper and plastic tapes

NEW: the width of tape is 20, 25, 30, 35, 40mm

Performs with banknotes and documents up to format A4

Simplicity and reliability of operation

DORS 500

BANDING MACHINE

TARGET AUDIENCE

Bank branch Bank vault Central Bank Exchange office Cash-In-Transit company

THE PURPOSE

DORS 500 is designed for automatic binding of banknotes and the documents up to A4 size with special heat-sealing band.

The machine has several presets for different types of bundles of banknotes (documents).

It's equipped with two start modes: automatic and manual. The machine has a simple access to the path in order to change the tape and for maintenance.

THE ADVANTAGES

- Fast operation (2 seconds per cycle)
- Machine is compatible with two types of tape: paper and plastic (OPP)
- Available widths of tape is 20mm, 25mm, 30mm, 35mm, and 40mm.
- User can easily adjust 5 working parameters of machine in order to provide best performance for different size and quantity of notes (documents) as well as for different types of tape.
- Energy saving pulse method of heat sealing.
- Low noise level.
- Compact and light weight machine.

THE SPECIFICATIONS

Time for banding of one batch (100 notes)	approx. 2 sec
Operating modes	auto, manual
Maximum loop size	600 mm
Width of band	20mm, 25mm, 30mm, 35mm, and 40mm
Display	red 4-digit LED
Adjustable parameters	full loop size
	nal loop size
	tightening force
	welding temperature
	pack retention time
Power supply	220 V
Power consumption	stand-by mode - 6 W
	pulse - approx. 110 W
Dimensions (W x D x H)	417x231x184/314* mm (* - with loop holders)
Net weight	7,5 kg



Wide packaging table



Simple access to the band-moving track